




Cat 940 Tapon Plug SIDE ENTRY

Recommended for use with 0.75mm² to 1.5mm²
PVC insulated ordinary duty 3 core circular flexible cords

STRIPPING DETAIL (FULL SIZE)




BARE WIRES

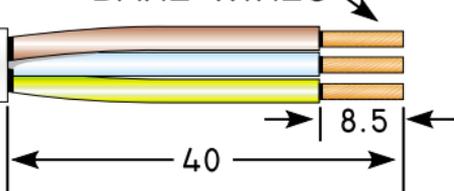


WIRING INSTRUCTIONS

1. Strip insulation as illustrated and twist bare conductor strands.
2. Connect the Earth wire (Green/Yellow or Green) to the terminal marked '⏏' and screw down and tighten the screw.
3. Connect the Active (Live) wire (Brown or Red) to the terminal marked 'A' and screw down and tighten the screw.
4. Connect the Neutral wire (Blue or Black) to the terminal marked 'N' and screw down and tighten the screw.
5. Place the wires hard down to the base and tighten the cord clamp around outer sheath of flexible cord.
6. **Check the wires are in their correct position as illustrated and the terminal screws are tight.**
7. Mount the plug cover in place and ensure the fixing screws are fully tightened.

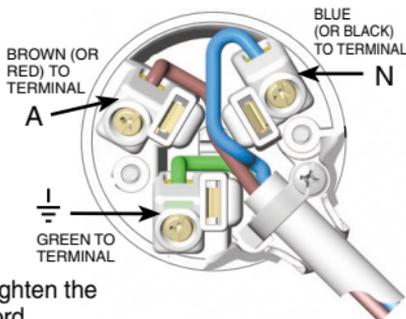

Note: Fit Adapter Piece (located between phase and neutral terminals) to cord clamp when using 2 core (0.75mm) flexible cord.

Configuration for use with 2 core flex

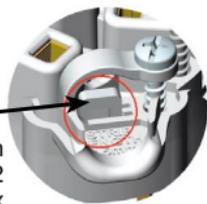

P D L

New Zealand Head Office: PO Box 15 355, New Lynn, Auckland, New Zealand
Telephone +64-9-829 0490, Fax +64-9-829 0491
www.pdl.co.nz



Electrical Products

PDL Industries Australia Pty Ltd
Locked Bag 5500, Baulkham Hills Business Centre,
Baulkham Hills NSW 2153, Australia
Freephone 1300 735 266, Freefax 1300 735 329
Telephone +61-29851 2666, Fax +61-29851 2695
www.pdl.com.au

